HOW TO SET UP YOUR

BASIC STUFF 30 DEAL DISPLAY

TO USE AS A FLOOR STAND:

1

Open and square up the base. Fold four bottom flanges under. Fold two upper and two lower side flaps in.

2

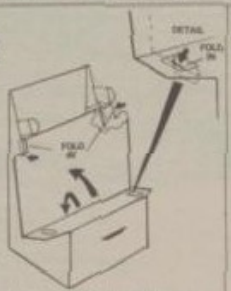

Push two lower lock tabs on shelf panel in. Fold shelf panels as shown, and lock to base by inserting bottom lock tabs first, then top lock tabs in adjacent slots. See detail for locking bottom slots.

3

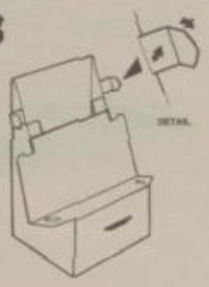

Shelf properly locked in position. Fold upper two tabs outward as shown.

4

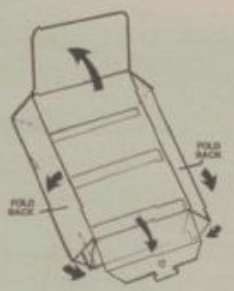

Fold sides of tray out and underneath as shown. Fold header up. Fold bottom panel down.

5

Hold side panels back and under tray as you place tray on base. Lock tray to base with two side tabs and bottom tab as shown. (Insert bottom tab, then push down to lock.)

TO USE AS COUNTER DISPLAYS:

(TOP TRAY)

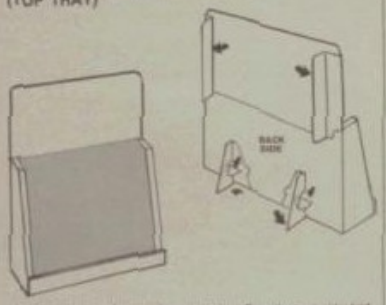

Remove this tray from the large outer tray. From the back side: fold header up and two stiffening flaps out to hold header in place. Fold out and lock two small easels.

#70865

(MIDDLE AND BOTTOM TRAYS)

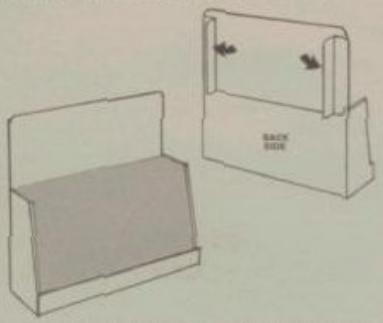

Remove these trays from the large outer tray. From the back side: fold header up and two stiffening flaps out to hold header in place.

70865

Source: https://www.industrydocuments.ucsf.edu/docs/rpgv0003

2061186537